

22 START/IGNITION (5.0L SEFI)

SEE CHARGE/
POWER
DISTRIBUTION
PAGE 12

