


**TEMPLATE AND INSTALLATION INSTRUCTIONS  
1993 COBRA GRILLE INSERT**

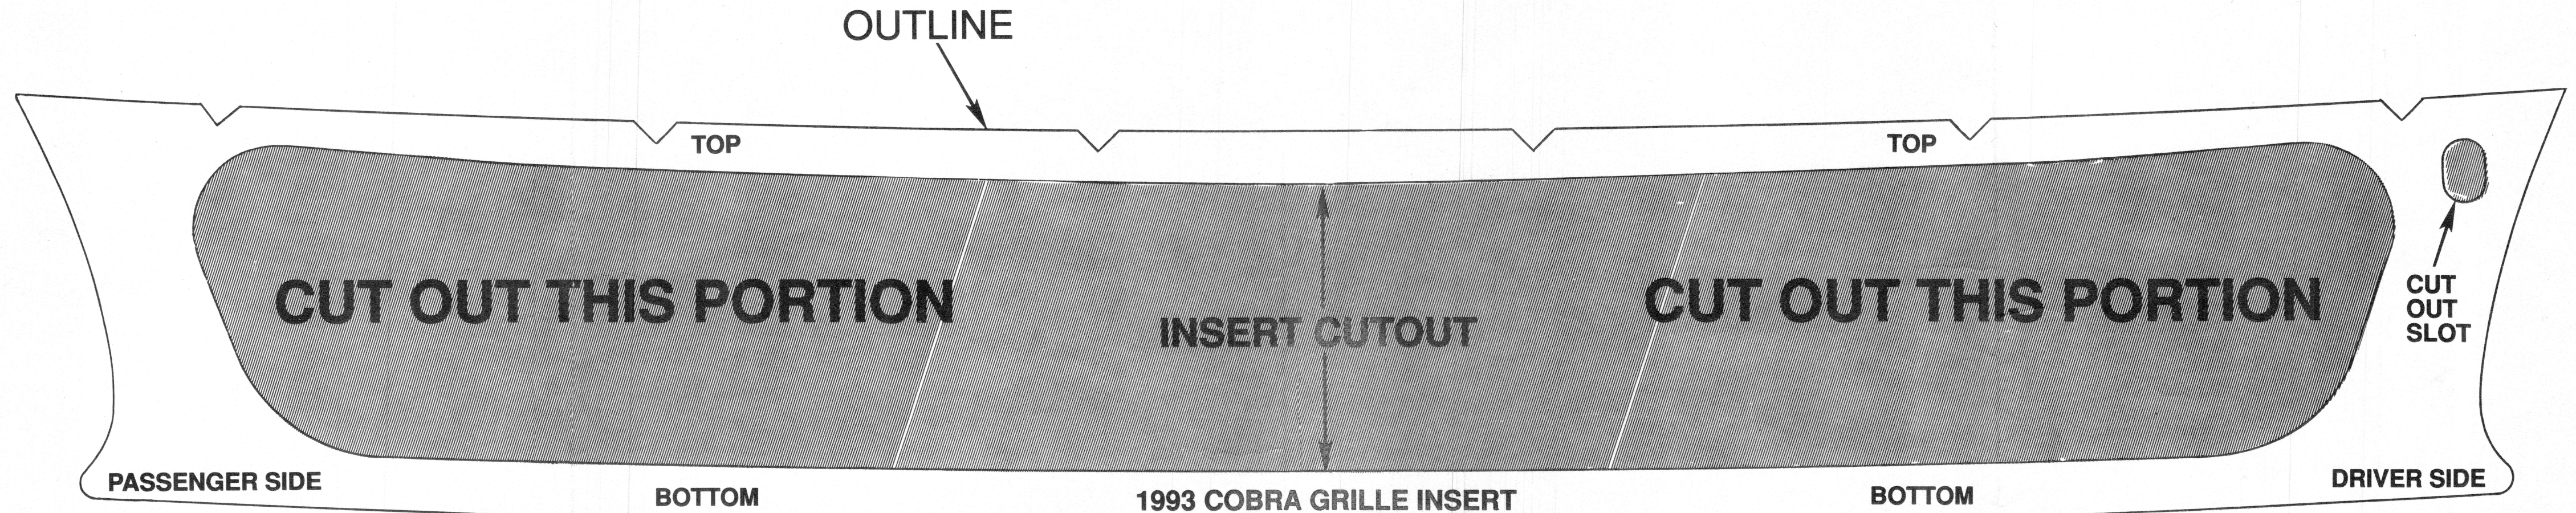

**INSTRUCTIONS**

1. Cut out template on outline.
  2. On outside surface, align template flush to top of, and centered with, the fascia. Tape in place with suitable tape.
  3. Transfer insert cutout line and slot (shaded areas) to fascia by making small dimples or pricks through template and into fascia.
  4. Remove template.
  5. Using a suitable pencil, connect the dimples or pricks for reference.
- NOTE:** Due to space constraints and possible damage to fascia, a sabre saw should not be used if fascia is installed on vehicle.
6. Cut out center. Use a disc-type saw, die grinder, or carefully hand-cut with a sharp blade or knife.
  7. Use a drill and bit to make holes for slot and clean up with a file or sharp blade or knife.